# ATp Installation Instructions



# Asset Tracker (with Power Cable) - Getting Started

Unit should be charged for a full 24 hours prior to installing your device.

Before installing your device, locate a constant positive 12 volt power source.

If you have the 16 feet extention cable you may have two different options:

If you have the wiring harness that has just the **Red** and **Black** wires you are going to wire the **Red** to the a constant positive 12 volt power source and the **Black** to a ground source.

If you have the wiring harness that has a set of 5 different wires you are going to wire the **Red** and **White** to the constant positive 12 volt power source and the Black to a ground source.

If you have the 2 feet extention cable you are going to wire the **Red** and White to the a constant positive 12 volt power source and the **Black** to a ground source.

# **Recharging the Battery**

The battery in your ATp device should last from 6 months to 3 years (when running on just the battery), depending on how often you have chosen for it to transmit its location. The battery will take approximately 8 hours to fully recharge. When your device is on a constant positive 12 volt power source the battery remains fully charged.

### **Tools Needed:**

Phillips Screwdriver, Screws





## Installing the AT

The Asset Tracker (with Power Cable) can be placed in or on just about anything, as long as there is a 12 volt power source available. It can be attached with magnets, Velcro, tape, screws, or housed in a protective enclosure that doesn't inhibit RF transmission. It is recommended that you place the ATp in a spot that has the clearest line of sight to the sky with the least metal obstructions, with the label side up if possible. Facing to the side can be effective, and even pointing it down in the right conditions. For assistance with installation, please call support at 1-800-293-0420.





